

Home Garden Bar Assembly



Take the back panel and attach the rear upright post to it. Make sure that the back panel lines up with the inner corner of the post. All panels have to line up with the inner corners of all the posts



Attach the left hand side panel to the post. All screw holes are pre-drilled.



The upper back panel can now be placed on top of the lower panel and screwed to it making sure the the frames are flush with each other. Then screw the upper panel to the rear post.



Attach the rear post to the right hand side of the bar and screw into place making sure that the panel is flush with the inner corner of the post.



Screw the upper and lower back panels together as shown



Place the front corner post flush to the side panel and screw into place. The front bar panel can now be screwed to the post



Attach the right hand corner post to the front panel making sure that it is flush to the inner corner of the post.




Place the corner return panel on the post and screw into place.



With all four corner posts now screwed into place the roof can be placed on top.



The roof can now be screwed to the rear posts through the **side** of the roof,

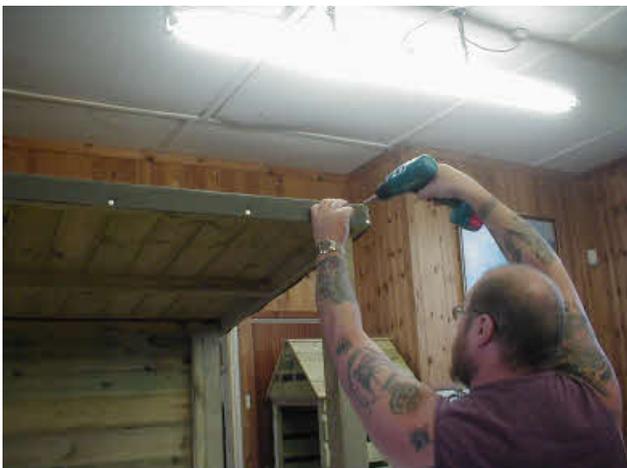

The roof can now be screwed to the front posts through the **front** of the roof.



Place the bar top onto the side panel



Place the bar top onto the front panel.



Screw the bar tops into place from underneath the panels as shown. All screw holes are pre drilled.



The front and side fascia boards can now be nailed into place.

Your Garden Bar is now ready for use!

Happy drinking Landlord

